 


WV 50

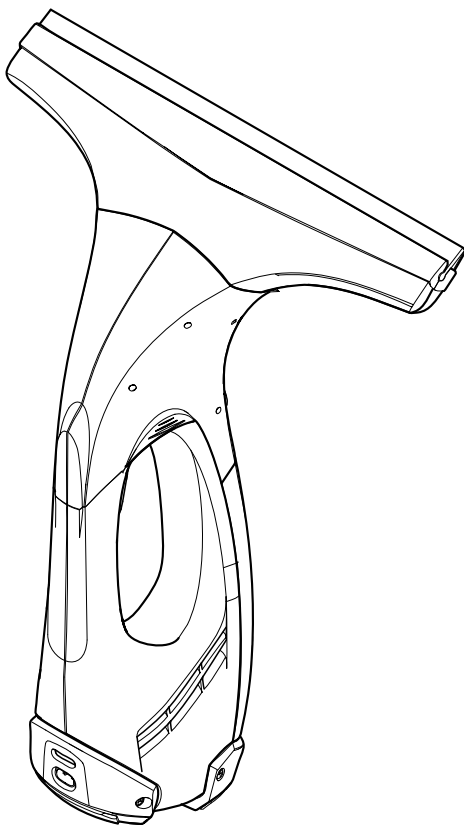

59633640 07/09

Window Cleaner OPERATOR MANUAL

Specifications	2
Proper use	2
Customer Support USA and Canada	2
Customer Support Mexico	2
IMPORTANT SAFETY INSTRUCTIONS	3
Start up	4
Description of the Appliance	4
Charge the battery	5
Start working	5
Interrupting the work	5
Emptying the reservoir during operation	5
Finish up your work / clean appliance	6
Troubleshooting	6
Disposal of Appliances	7
Remove battery pack and dispose of	7

Specifications

Type of protection	IP X4	
Volume of dirt water reservoir	3,3	oz.
Operating time with full charge	20	min
Rated power of appliance	12	W
Charging current for empty battery	3,0	h
Rated charger voltage	4	V
Nominal current of charger	600	mA
Weight	1,5	lbs
Battery type	Li-Ion	
Nominal battery voltage	3,6	V
Power Input	120-127 V 60 Hz	
Part No.	1.633-109.0	

Subject to technical modifications!

Proper use

- Use this battery operated appliance only for personal use, for cleaning moist, smooth surfaces such as windows, mirrors or tiles. Not meant for the vacuum of dust.
- The appliance is not intended to vacuum up larger amounts of fluids from horizontal surfaces, such as from a tipped drinking glass (max. 0,8 oz.).
- Only use this appliance with conventional window cleaners (no spirit, no foam cleaners).
- Please use this appliance only with accessories and spare parts approved by KÄRCHER.

Any use extending beyond what is listed above is not considered as proper use. The manufacturer is not liable for any losses resulting from improper use.

Customer Support USA and Canada

To register this product, please visit:

www.karcher-register.com

For technical support, go to:

www.karcher-help.com

If you need to file a warranty claim, please call: **1-800-537-4129**

You will need to fax or email your receipt to a customer service agent. All other information can be found at:

www.karcherresidential.com

Customer Support Mexico

Call: **01-800-024-13-13** for help or visit our website: www.karcher.com.mx

IMPORTANT SAFETY INSTRUCTIONS

When using this product basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

- 1 DO NOT LEAVE appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- 2 DO NOT USE outdoors or on wet surfaces.
- 3 DO NOT ALLOW to be used as a toy. Close attention is necessary when used by or near children.
- 4 USE ONLY as described in this manual. Use only manufacturer's recommended attachments.
- 5 DO NOT USE with damaged cord or plug.
- 6 DO NOT pull or carry by the cord, do not use cord as a handle, do not close a door on the cord, or pull cord around sharp edges or corners. DO NOT run appliance over cord. Keep cord away from heated surfaces.
- 7 DO NOT unplug by pulling cord. To unplug, grasp plug.
- 8 DO NOT handle plug or appliance with wet hands.
- 9 DO NOT put any objects into openings. Do not use if openings are blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- 10 KEEP HAIR, LOOSE CLOTHING, FINGERS, and all parts of the body away from openings and moving parts.
- 11 TURN OFF all controls before unplugging.
- 12 USE EXTRA CARE when cleaning on stairs.
- 13 DO NOT USE to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

SAVE THESE INSTRUCTIONS !

Information regarding the battery

- **Short circuit hazard!** Do not insert conductive objects (such as screwdrivers or similar) into the charger plug.
- You may recharge the battery using only the original charger provided with the appliance or a charger approved by KÄRCHER.

Tips for using the battery charger

- In case of visual damage, replace the charger with original manufacturer suggested parts.
- The voltage indicated on the type plate must correspond to the supply voltage.
- Only use and store the charger in dry rooms, ambient temperature 41 - 104 °F (5 - 40 °C).
- Never touch the mains plug with wet hands.

Information regarding the transport

 
- The battery has been tested as per the relevant directives for international transport and can be transported/ shipped.

Start up

Description of the Appliance

When unpacking the product, make sure that no accessories are missing and that none of the package contents have been damaged. If you detect any transport damages please contact your retailer.


- 1 Charger with charging cable
- 2 **Basic appliance**
- 3 Charging box
- 4 Charge/operations display
- 5 Support leg
- 6 Handle
- 7 ON/OFF switch for appliance
- 8 Dirt water reservoir, removable
- 9 Lock, dirt water reservoir
- 10 **Suction head**
- 11 Release, suction head
- 12 Attachment with removable lips
- 13 Release, attachment

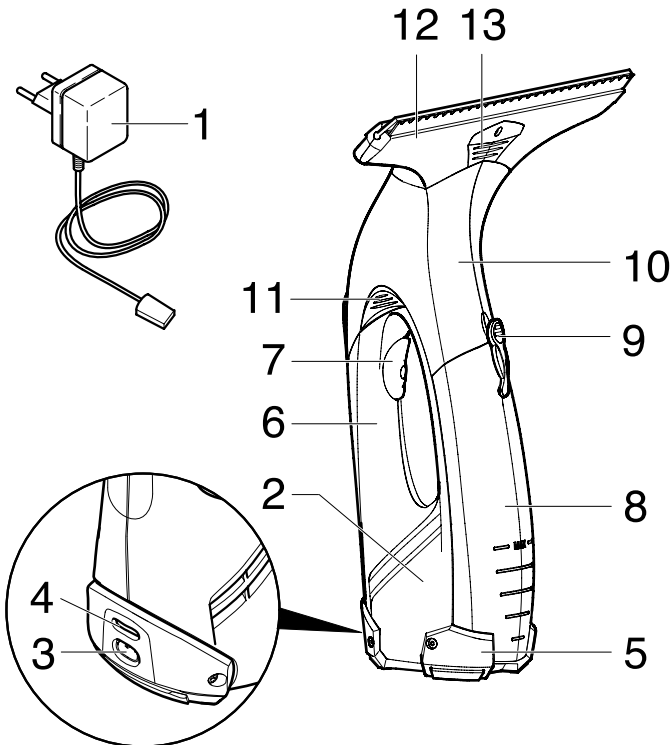

For household use only!

Charge the battery

 - Insert the charger delivered with the appliance into a proper socket.
- Insert the charging cable plug to the back of the appliance.

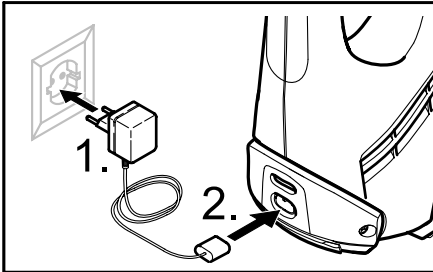


Note: During the charging process, the charge/operating display blinks. Once the battery is fully charged, it will be permanently illuminated.

- We recommend unplugging the charging plug and the charger after the charging process is complete (after approx. 3 hours).

Recharge the battery after finishing your work.

Start working

 - Apply conventional window cleaner to cleaning area.
- Switch the appliance on, the charge/operations display will illuminate.
- Pull the appliance from the top to the bottom to vacuum up the cleaning solution residue.

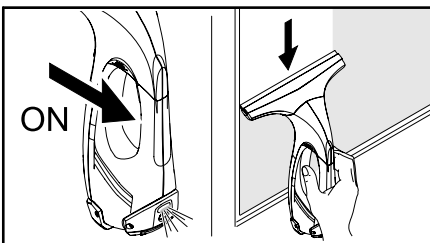

Note: Hard to reach areas can be vacuumed vertically or horizontally (limited areas).

 
Notes:

If the battery is losing its performance, the charge/operations display will begin to blink slowly and the appliance will shut off after a certain time. In this case, recharge the battery.

Switch the appliance off after each cleaned surface. This will increase your operating time per battery charge.

Interrupting the work


- Set the appliance on the support leg (parking position) and switch it off.

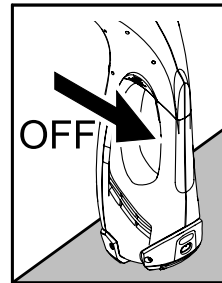

Emptying the reservoir during operation

Once the max. fill level (mark) of the dirt water reservoir is reached, please empty the tank.

 
- Turn off the appliance.
- Pull off the lock of the dirt water reservoir and empty the tank.

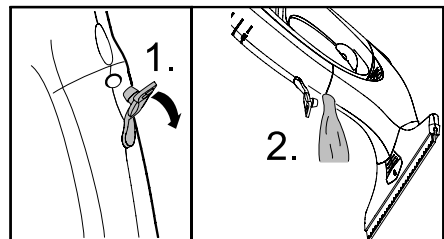

- Close the dirt water reservoir.

Finish up your work / clean appliance

 
- Turn off the appliance.
- First, release the attachment with the pull-off lips and remove it from the suction head, then release the suction head and remove.

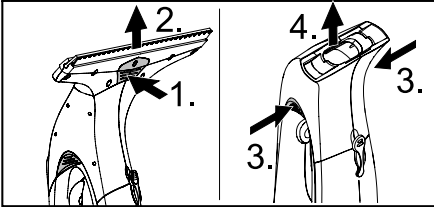

- Clean the suction head and the attachment with the pull-off lips under running water (do not wash in dishwasher).

Caution: The basic appliance contains electrical components. Do not clean this under running water!

 - Remove the dirt water reservoir, rotate the lock and pull out.

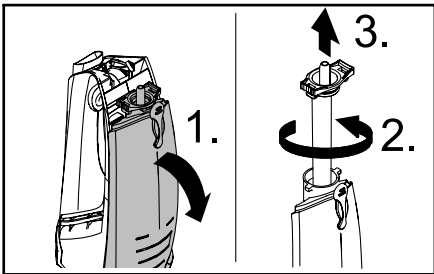

- Empty the reservoir and rinse with clear water. Close the reservoir again.
- Let the cleaned appliance dry prior to assembly.
- Charge the battery.

Storing the Appliance

- Store the appliance upright in a dry room.

Troubleshooting

Machine does not start

Check the charge/operations display:

- No signal or slowly blinking signal: Charge the battery.
- With a rapidly blinking signal: Inform your dealer.

Streaks while cleaning

- Clean the pull-off lip.
- Turn the upper pull-off lip around by pulling it out to the side, turning it around and reinserting it.
- Replace pull-off lip if required.
- Adjust the dosing of cleaning solution.

Water is leaking from the air louvers

- Empty the dirt water reservoir (max. 3,3 oz. content).

Replacement parts

To purchase replacement parts please visit www.buykarcher.com

 
Disposal of Appliances

This appliance includes a built-in battery pack; please remove this battery pack before disposing of the old appliance.

Remove battery pack and dispose of

→ The appliance may only be opened in order to dispose of the battery pack.

Caution when opening the appliance **avoid short circuits.**

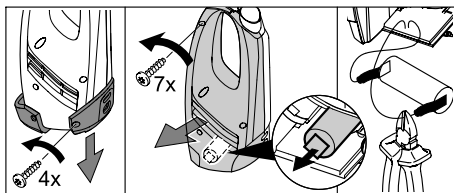

→ Remove the battery pack and dispose of properly (at a collection site or the dealer).

⚠ Warning

- **Do not open the battery**, as there is a risk of an electrical short; also, irritating or caustic vapors can escape.
- **Do not expose the battery to direct sunlight, heat or fire**, there is a risk of explosion.