# Straight, Rear Entry Spray Gun



# **FEATURES**


- · Shockproof plastic housing
- Internal construction of brass and Stainless Steel

- Ergonomic design
- · Minimizes fatigue for the operator


## **SPECIFICATIONS**

Part Number	YG4032S
Maximum Volume	32 GPM
Rated Discharge Pressure	4,050 PSI
Maximum Discharge Pressure	4,500 PSI
Maximum Fluid Temperature	320°F
Inlet Port Thread	1/2" NPT-F
Discharge Port Thread	1/2" NPT-F
Weight	2.8 lbs
Dimensions	10.08" x 6.68" x 1.2"
Materials	Stainless Steel, Brass, Plastic, Viton

## **DIMENSIONS**

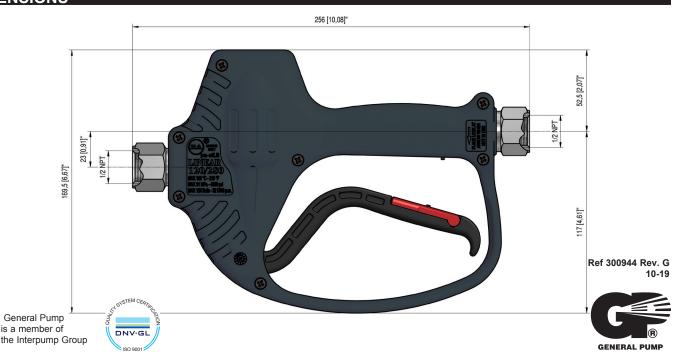

#### **PARTS LIST**

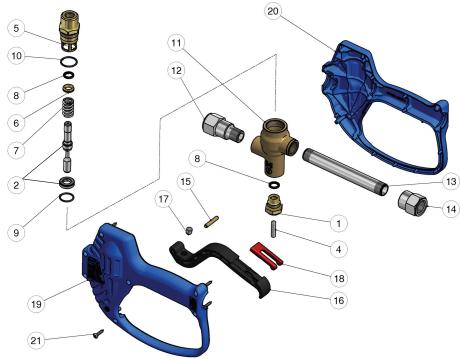

No.	Part No.	Description	Qty.
1.	Y30403831	Front Plug, M18x1.5, Brass	1
2.*	Y30404524	Piston + Seal Kit	1
4.	Y30404151	Parallel SST Pin, 6x25.8 mm	1
5.	Y30403731	Spring Holder	1
6.	Y30404031	Spacer Ring, 10.1x15.8x3.8 mm, Brass	1
7.*	Y30404251	Spring, 2.4x15.3x30 mm, SST	1
8.*	Y10202700	Stem Seal, 10x15x2.2 mm, + O-ring	2
9.*	Y10306801	O-ring, 1.78x17.7 mm	1
10.*	Y10307201	O-ring, 1.78x20.35	1
*	Y30404624	Repair Kit YG4032S	

11.   Y30068135   Housing   1     12.   Y30065251   Coupling, 1/2" NPT-F, SST   1     13.   Y30510456   Tube, M18x1.5, SST   1     14.   Y30065451   Coupling, 1/2" NPT-F, SST   1     15.   Y30251731   Parallel Pin, 5x27.5 mm, Brass   1     16.   Y30530384   Trigger, Black   1     17.   Y30225551   Stop Pin, 8X7.5, SST   1     18.   Y30151084   Safety Latch, Red   1     19.   Y30068624   Casing Kit + SS Screws   1     21.   Y16307551   Self Tapping Screw, 3.5x18 mm, SST   7	No.	Part No.	Description	Qty.
13.   Y30510456   Tube, M18x1.5, SST   1     14.   Y30065451   Coupling, 1/2" NPT-F, SST   1     15.   Y30251731   Parallel Pin, 5x27.5 mm, Brass   1     16.   Y30530384   Trigger, Black   1     17.   Y30225551   Stop Pin, 8X7.5, SST   1     18.   Y30151084   Safety Latch, Red   1     19.   Y30068624   Casing Kit + SS Screws   1	11.	Y30068135	Housing	1
14. Y30065451   Coupling, 1/2" NPT-F, SST   1     15. Y30251731   Parallel Pin, 5x27.5 mm, Brass   1     16. Y30530384   Trigger, Black   1     17. Y30225551   Stop Pin, 8X7.5, SST   1     18. Y30151084   Safety Latch, Red   1     19. Y30068624   Casing Kit + SS Screws   1	12.	Y30065251	Coupling, 1/2" NPT-F, SST	1
15. Y30251731   Parallel Pin, 5x27.5 mm, Brass   1     16. Y30530384   Trigger, Black   1     17. Y30225551   Stop Pin, 8X7.5, SST   1     18. Y30151084   Safety Latch, Red   1     19. Y30068624   Casing Kit + SS Screws   1	13.	Y30510456	Tube, M18x1.5, SST	1_
16. Y30530384 Trigger, Black 1   17. Y30225551 Stop Pin, 8X7.5, SST 1   18. Y30151084 Safety Latch, Red 1   19. Y30068624 Casing Kit + SS Screws 1	14.	Y30065451	Coupling, 1/2" NPT-F, SST	1
17. Y30225551   Stop Pin, 8X7.5, SST   1     18. Y30151084   Safety Latch, Red   1     19. Y30068624   Casing Kit + SS Screws   1	15.	Y30251731	Parallel Pin, 5x27.5 mm, Brass	1
18. Y30151084   Safety Latch, Red   1     19. Y30068624   Casing Kit + SS Screws   1	16.	Y30530384	Trigger, Black	1
19. Y30068624 Casing Kit + SS Screws 1	17.	Y30225551	Stop Pin, 8X7.5, SST	1
•	18.	Y30151084	Safety Latch, Red	1
21. Y16307551 Self Tapping Screw, 3.5x18 mm, SST 7	19.	Y30068624	Casing Kit + SS Screws	1
	21.	Y16307551	Self Tapping Screw, 3.5x18 mm, SST	7

### INSTRUCTIONS

This product is to be used with clean, fresh water. For use involving different or corrosive liquids, contact your GP's customer service department. Appropriate filtration should be installed when using unclean liquids. Choose the gun that most closely matches the rated pressure, max flow and max temperature of the pressure wash system. In any case, the pressure of the machine should not exceed the permissible pressure rate imprinted on the gun.

#### INSTALLATION

This gun was designed to operate with hot water (in compliance with the technical specs), making sure not to exceed the max temperature. Always fit a safety valve to protect the system when the latter is under pressure. Choose a suitable nozzle and adjust the valve mounted in the front of the gun, thus obtaining a constant supply and avoiding unwanted pressure spikes. If the nozzle wears out, the pressure falls. When you install a new nozzle, adjust the system back to the original pressure.

### **OPERATION**

The gun opens and closes a high pressure conduct by means of a piston acting on a seat; the return is controlled by a spring which releases the trigger. Attention: during pump activation ALWAYS set the gun with its safety latch connected in order to prevent accidental openings.