


## Picture Guide ▶ Attaching Water Suction Hose to Kärcher Residential Pressure Washer


**1** Requires adapter (A) and hose clamp (B) for installation, both sold separately



(A) (B)

part number 91540130\*


**2** Cut hose to remove threaded coupling




**3** Slide hose clamp (B) over cut end of hose



**4** Insert adapter (A) into open end of hose, deep enough to secure hose clamp (B)



**5** Use screwdriver to fasten hose clamp (B) in place, securing adapter (A) to hose



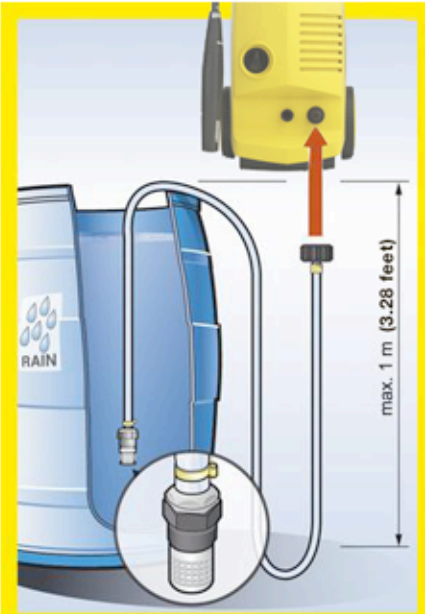
**6** Insert adapter end of hose into pressure washer water inlet



**7** Thread adapter end of hose into water inlet until tight



**8** Insert filter end of hose into pond, bucket or rain water tank. Turn on pressure washer!

The water suction hose is 3m (9.8 feet) in length and can draw water from a standing source up to 1m (3.28 feet) below the pressure washer. These modifications are for U.S./Canadian residential pressure washers only. \*Adapter (A) is available at [BuyKarcher.com](http://BuyKarcher.com). Hose clamp can be purchased at most hardware stores.