Su yect to change without notice

29.11.2011


© MOSMATIC AG

TUW 520 No. 80.613

Assembly instructions



(This instruction is valid for the base model as well as for the resulting versions)

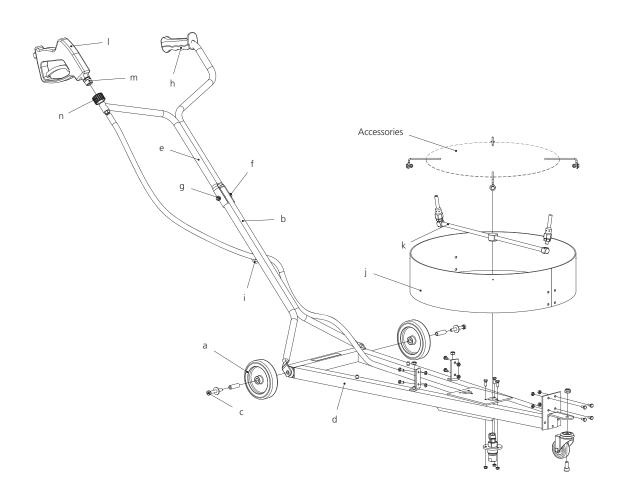

- Dismount both wheels (a).
- Install the lower fork (b) with the bolts (c) with the wheels (a) to the rack (d).
- Slide the upper fork (e) over the lower fork (b). Secure the two forks with the bolt (f) and the safety nut (g).




Note: the handle (h) and the ring (i) point in the same direction.

- The protection ring (j) and the rotor arm (k) are as factory
- Connect the HP-gun (I) with the preinstalled adapter (m) to the 5 quick connect (n).

For your own safety

- Read all instructions before the initial operation. Check their proper condition and that they operate safely.
- Always use protection gear when using products connected to
- Before any maintenance or nozzle-change, turn off the high pressure water supply, e.g.: turn off and secure the
- After turning off the system, allow all self propelled equipment to come to a complete stop before handling.
- Safety regulations and guidelines (Accident Prevention Rules) from the manufacturer of your high pressure cleaner are
- Nozzle installation according to nozzle manufacturer.
- Do not move the unit over objects or uneven surfaces.
- Do not lift up the unit while operating.
- Do not run the unit if spray-arm is out of balance or bent, damage to the swivel will result.
- No modifications to the unit are permitted.
- The equipment may be installed and used only by particularly trained technical personnel.

Spare parts List

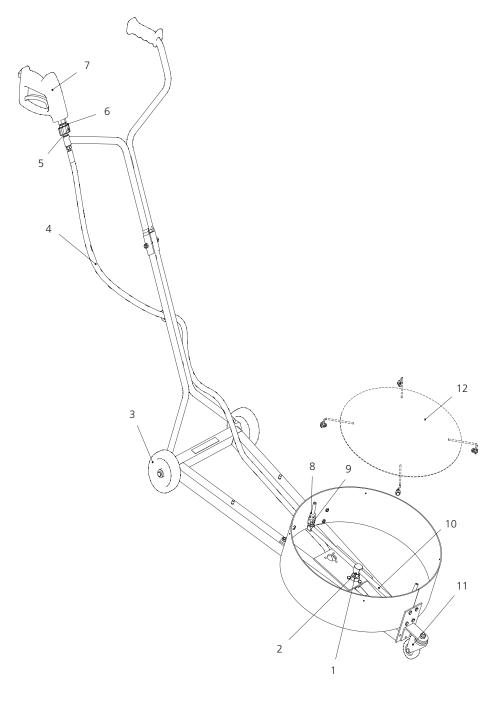

Pos.	Part No.	Description	
1	58.303	Swivel DYF	90°
2	36.905	Carbide seal-kit	
3	900.933	Rubber wheel	Dia. 5"
4	903.325	HP-hose	G1/4"kM - G1/4"kM
5	50.903	Quick-connect	M22-F - G1/4"M
6	51.278	Adaptor	M22-M - 1/4"NPT-M
7	29.081	HP-gun	4000 psi
8	14.902	Stabilizer Nozzle	
9	18.030EG	Insert Nozzle	
10	82.891	Turbo-rotor-arm	Dia. 18.5"
11	900.932	Stainless steel castor	

Accessoires

11 80.621 Guard