


ON-DEMANDTM 915 POWER STEAMER[®]

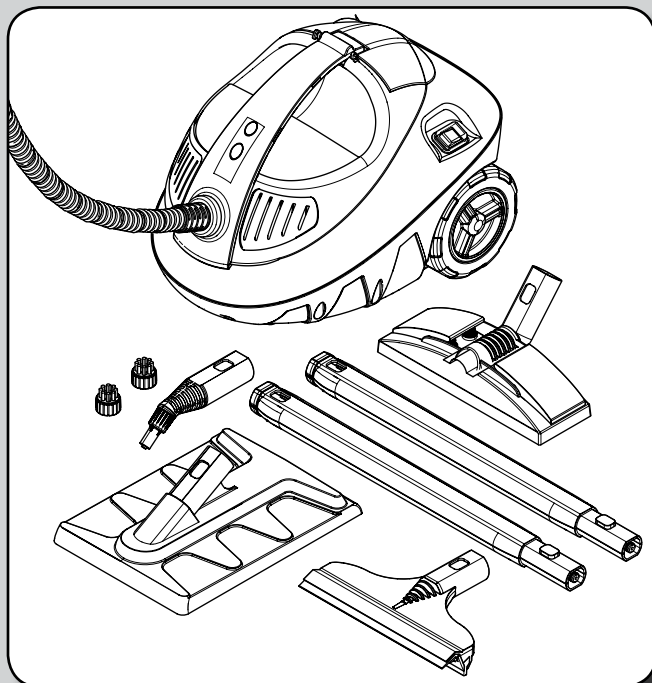

Owner's Manual (page 2)

Read this manual for complete instructions

Manuel de l'utilisateur (page 8)


Lire ce manuel pour obtenir des directives complètes

Manual del usuario (página 14)


Lea este manual para obtener las instrucciones completas

WAGNER[®]


Quick Start Guide • Guide de démarrage rapide • Guía Rápida para comenzar

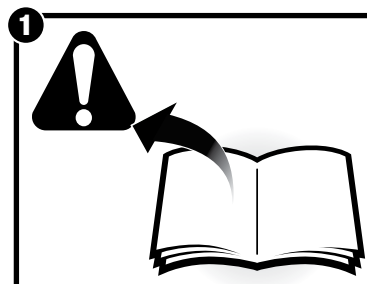


Read all warnings
Lisez tous les avertissements
Lea todas las advertencias

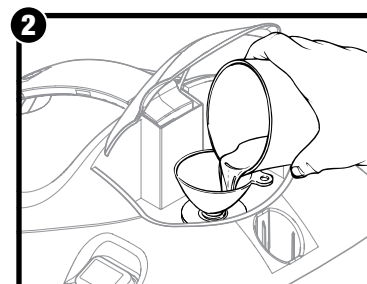


Fill container with water (48 oz max)
Remplissez le réservoir avec de l'eau.
(1,4 l maximum)
Llene el contenedor con agua (1,4 l máximas)

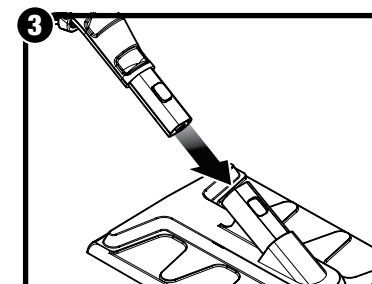


Attach handle to accessory
Assemblez la poignée et la accessoire
Coloque el mango en la accesorio

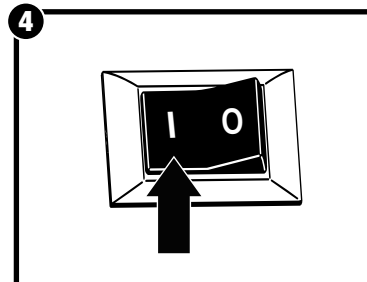


Plug in power cord switch ON (I)
Branchez le cordon d'alimentation et mettez l'interrupteur en marche (I)
Enchufe el cable de alimentación y enciende la unidad (I)

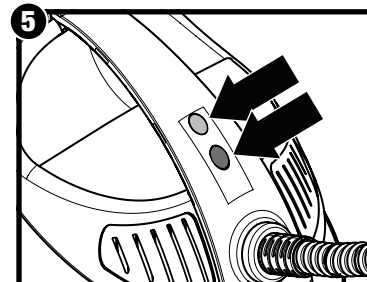


Allow unit to heat (green and red lights on)
Laissez chauffer l'appareil (témoin lumineux vert et rouge allumés)
Deje que la unidad se caliente (luces verde y rojo encendidas)

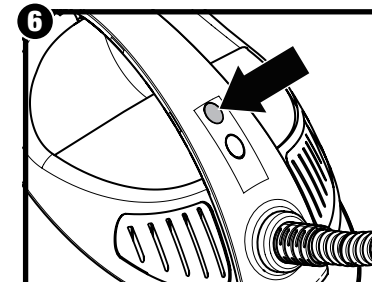

Green light only = you are ready to steam
Témoin lumineux vert allumé seulement = prêt à vaporiser
Sólo luz verde encendida = La unidad está lista para generar vapor

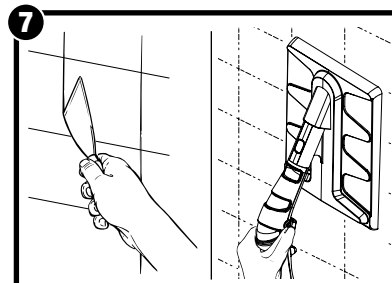

Score and remove wall paper or
Érafflez légèrement le papier peint, puis enlevez le, ou . . .
Marque y retire el papel tapiz, o . . .

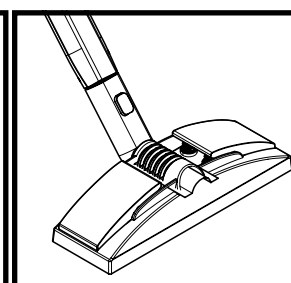

perform cleaning job
accomplir la tâche de nettoyage
realizar la tarea de limpieza



DO NOT FILL THE STEAMER WITH ANY LIQUIDS EXCEPT CLEAN WATER.

REMPLISSEZ LE VAPORISATEUR EN UTILISANT SEULEMENT DE L'EAU PROPRE.

NO LLENE EL GENERADOR DE VAPOR CON NINGÚN LÍQUIDO SALVO AGUA LIMPIA.

Important Safety Information



Read all safety information before operating the equipment. Save these instructions

To reduce the risks of fire or explosion, electrical shock and the injury to persons, read and understand all instructions included in this manual. Be familiar with the controls and proper usage of the equipment.



Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



DO NOT FILL THE STEAMER WITH ANY LIQUIDS EXCEPT CLEAN WATER. Do not use household cleaners, bleach or any other chemicals with this steamer. This can result in a dangerous situation, resulting in an explosion.

HAZARD: Hot steam and parts. May cause injury, including skin burns or property damage. Temperatures exceed 212° F (100°C).



PREVENTION:

- Stay clear of steam and steam plate surface. DO NOT place hand in front of steam plate.
- Water drops are hot and may burn skin. Use extreme caution when using steam plate overhead, and routinely empty water from steam plate. Wear eye protection and gloves when using this steamer.
- Spray handle may become warm to the touch during usage.
- Allow parts to cool before changing accessories and /or opening fill cap.
- Never point steam plate or accessories at anyone.
- Hot water may eject from accessories when trigger is activated.
- DO NOT over fill water container.
- DO NOT strain or kink hose. Never repair a damaged hose.

HAZARD: Fire. May cause severe injury and/or property damage.



PREVENTION:

- DO NOT allow water to boil dry. Boiling dry may cause overheating and fire.
- DO NOT allow water or steam to enter light switches or sockets.

HAZARD: Electrical Shock. May cause severe injury.



PREVENTION:

- Power cord must be connected to grounded (3 prong) outlet.
- DO NOT use the unit if the power cord is worn or damaged. Never repair a power cord.
- DO NOT pull water container by power cord.
- DO NOT allow water or steam to enter light switches or sockets.

HAZARD: General. May cause injury and/or property damage.

PREVENTION:

- DO NOT modify parts or components. Never repair damaged or worn parts.
- Water container must rest on a sturdy, level surface and in upright position.
- Keep power steamer away from children.
- NEVER leave power steamer unattended.
- Read all instructions and warnings before each use.

Grounding Instructions

This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with an appropriate grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.


WARNING! — Improper installation of the grounding plug can result in a risk of electric shock.

If repair or replacement of the cord or plug is necessary, have your nearest Wagner Authorized Service Center replace it.

Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded. Do not modify the plug provided; if it will not fit the outlet, have the proper outlet installed by a qualified electrician.

Extension Cords

Use only a 3-wire extension cord that has a 3-blade grounding plug, and a 3-slot receptacle that will accept the plug on the product. Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. For lengths up to 100 feet, use 14 AWG extension cords.

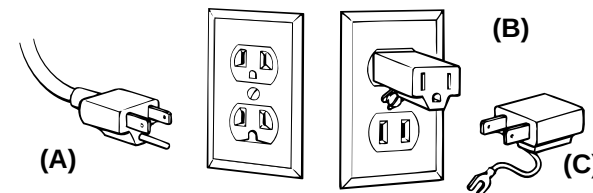

Thermal Safety Fuse Reset

Always fill the unit before plugging it in. If the steamer is plugged in before it is filled with water, or if the steamer is allowed to run dry, a thermal safety fuse will open, causing the unit to turn off. If this happens, unplug the unit and allow it to cool for at least 10 minutes. The safety fuse will reset itself.

NOTE: The water container, heating element and hose are not serviceable. Should a problem occur with the steamer, contact Wagner Technical Service.

Product Registration

Register your product online at www.wagnerspraytech.com. Proper registration will serve as proof of purchase in the event your original receipt becomes misplaced or lost.

Parts and Components

Start Replaceable parts:

These parts can be ordered or replaced by calling Wagner Technical Service:

Steam plate
Jet nozzle and brushes (2)
Extension (2)
Squeegee
Cleaning brush
Cleaning brush towel
Funnel

*Indicator lights:

Green and Red light on = unit warming up
Green light only on = ready to steam


Questions?

Call Wagner Technical Service at:

1-800-727-4023

Register your product online at:

www.wagnerspraytech.com

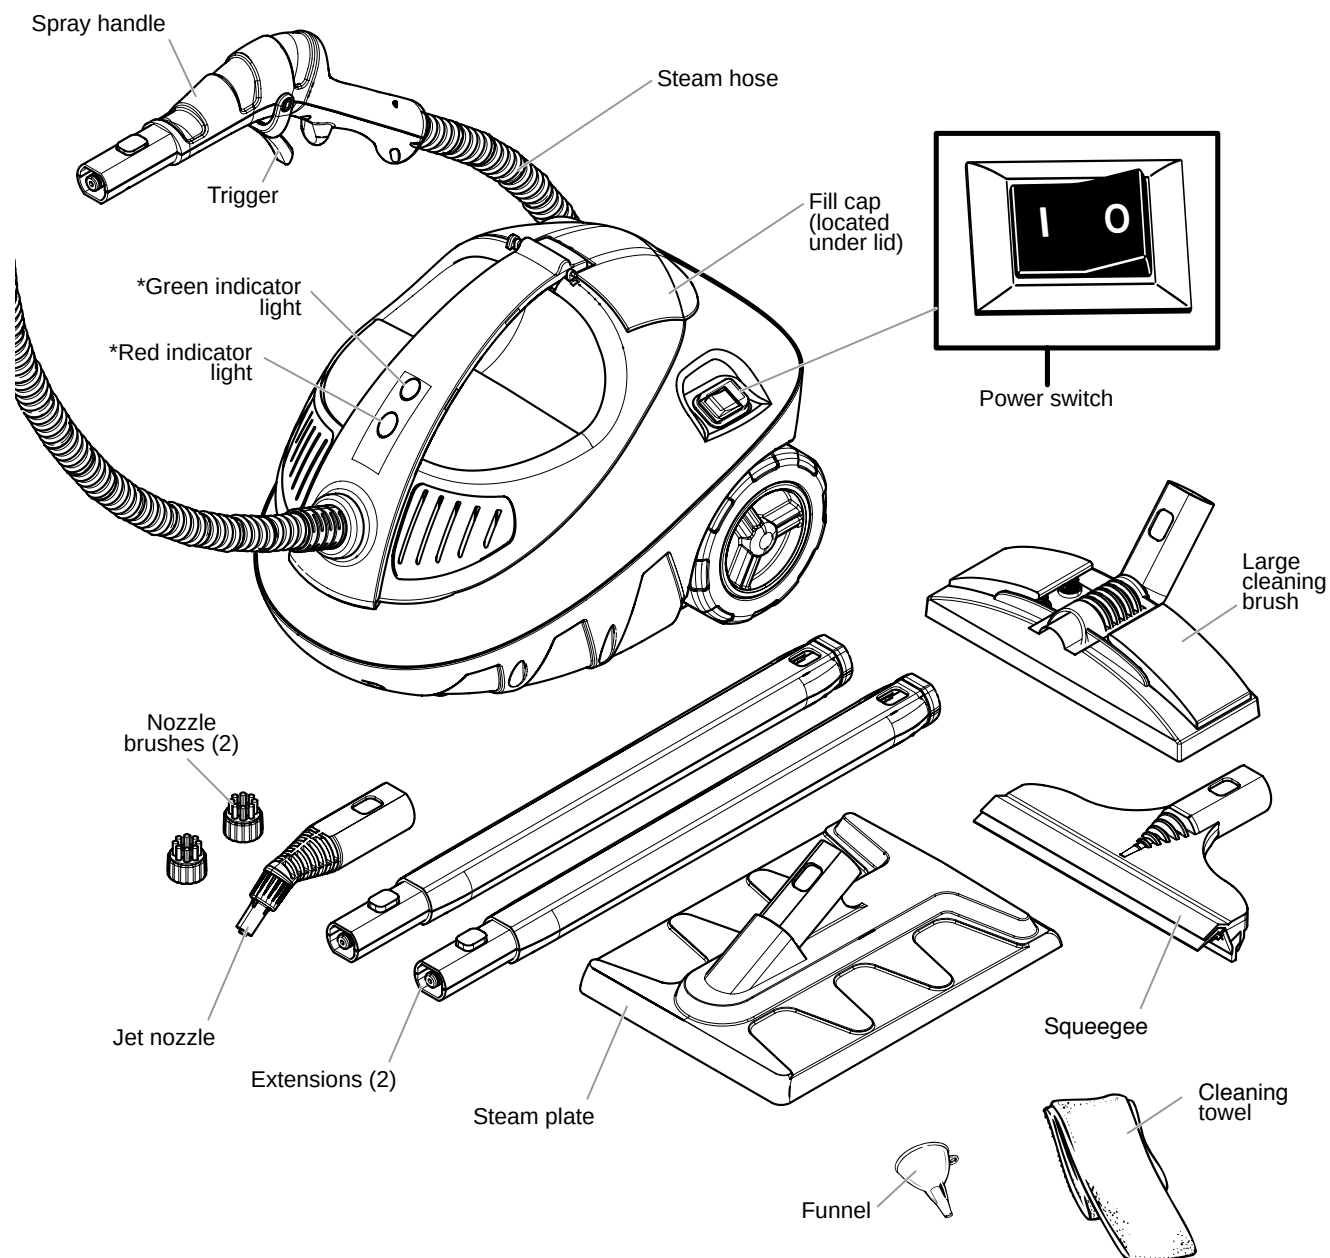

Setup

Start Before you begin:




DO NOT FILL THE STEAMER WITH ANY LIQUIDS EXCEPT CLEAN WATER. Do not use household cleaners, bleach or any other chemicals with this steamer.




Never use more than two extensions when using the steamer.




Never attach extensions or accessories while unit is emitting steam.

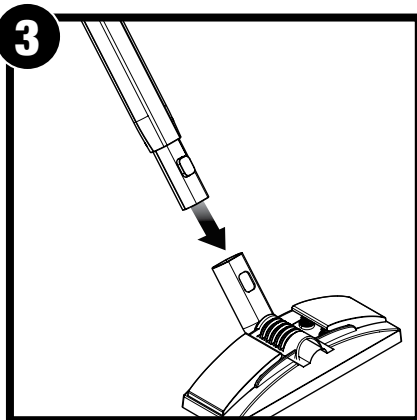


3. If using an extension, attach the accessory to the extension.

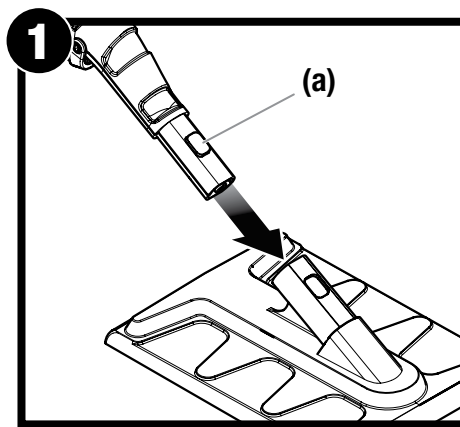


1. Push the button on the handle (a) and attach the steam plate, extensions, or cleaning accessory to the trigger mechanism.

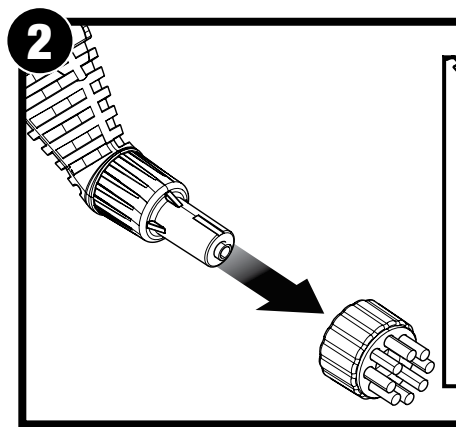

2. If using the jet nozzle, assemble the brush onto the nozzle.

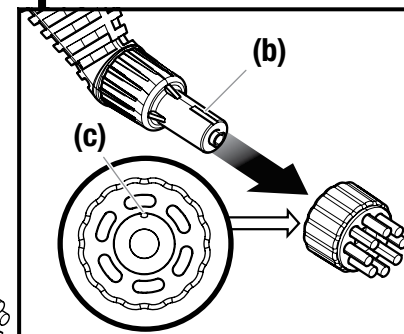


Note: When attaching the nozzle brush to the jet nozzle, line up the notch in the jet nozzle end (b) with the guide inside the nozzle brush (c).

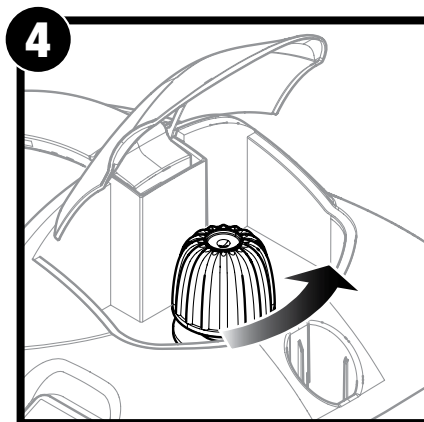

4. Flip up filler cap lid and carefully unscrew filler cap.
Using the funnel, fill the steamer with clean tap water (distilled water recommended).
DO NOT OVERFILL.

Amount of water	Steam time
16 oz.	15 min
32 oz.	30 min
48 oz.	45 min

5. Use the chart above as a guide to determine how much water you will need based on how long you need to use the steamer.
Replace fill cap and shut filler cap lid when filled with desired amount.

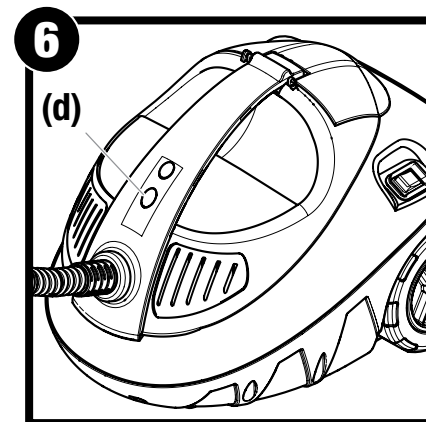

6. Plug in the power cord and turn the switch ON (I). Both the green and red indicator lights will turn on.
Once the red indicator light on the container turns off (d), you are ready to begin steaming.

Note: When the red light turns back on, you can continue steaming.

Usage

Start Before you begin:



DO NOT leave steam plate unattended, or face down on any surfaces.



DO NOT operate the steamer once the water container is empty. Make sure to wear gloves and eye protection.



Before unscrewing the filler cap and filling the reservoir, make sure any remaining water has cooled for at least twenty (20) minutes. Empty any remaining water to avoid over-filling.




Do not look directly down into the fill hole when filling. Keep your free hand and others at a safe distance.



The spray handle may become warm to the touch during usage.

Note: Before using, trigger the spray handle into a sink or empty bucket to purge any remaining cold water.


Using the trigger

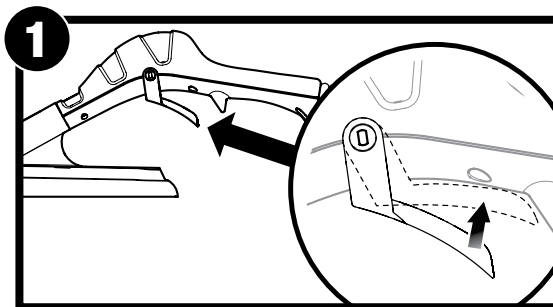


1. You can control the flow of steam from the accessory by activating the trigger. The trigger will also relieve any built-up pressure remaining in the system after the steamer has been shut off.

Note: Just turning the power OFF does not relieve steam pressure. During cool down, treat the unit as if it is under pressure. Always activate the trigger before removing the fill cap.


Cooling / refilling

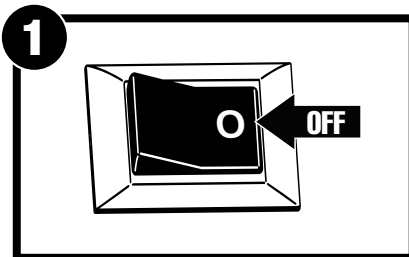

1. Shut the unit OFF. Activate trigger until all pressure has been released.

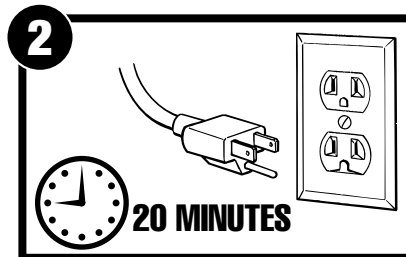


2. Unplug power cord. Allow steamer to cool for at least twenty (20) minutes.
* See NOTE, above.

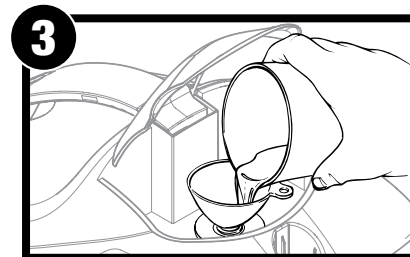


3. Once unit has sufficiently cooled, repeat steps 4-6 in Setup to continue.

Wallpaper removal

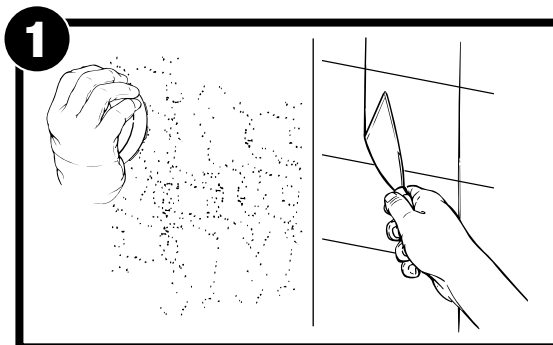

1. For best results, use a scoring tool or a putty knife and gently score the wallpaper in a crisscross pattern before removal. The perforations will allow the steam to penetrate the wallpaper.

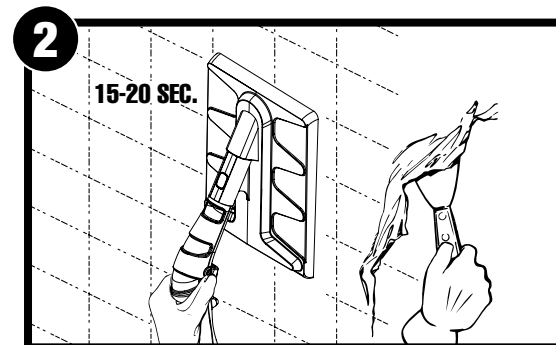

2. To remove wallpaper, hold the steam plate flat against the scored wallpaper. Pull the trigger and hold for 15-20 seconds. Move the steam plate to a new section and remove the steamed section with a scraper blade.

Steam cleaning

General Notes:

Using Steam on Delicate Materials

Always check the suitability of materials before steam cleaning. Steam is being generated at temperatures in excess of 212°F (100°C). Do not use on any surfaces that cannot withstand this temperature. Always test a small area of the material, preferably an area that is normally out of view. Do not soak materials being cleaned. Only a light application of steam is required. See below for more information on steam cleaning.



DO NOT attempt to use the steam plate included with this unit as a cleaning device. The steam plate is designed for wallpaper removal only. This unit is not recommended to be used on self-adhesive vinyl tiles.



Pressurized steam may bounce back off cleaning surface.

- Using the cleaning accessories generally require less water than wallpaper removal. Using less water will decrease time it takes for the unit to make steam.
- Activate the trigger as needed for sufficient steam supply. Use the soft bristles to brush away dirt, grease, unwanted dried paint, etc. **DO NOT** over-scrub the surface unless you are cleaning tiles or stone.
- Use only clean tap water or distilled water when using the steamer. No detergents or any other additives are needed.
- When cleaning upholstery or clothing, **DO NOT** soak the material. Try cleaning an inconspicuous area that is normally not in view and wait 24 hours before checking whether the material has been affected. If material has been adversely affected, **DO NOT CONTINUE!**


Using the Cleaning Accessories:

The accessories are excellent tools for cleaning a variety of surfaces.

Note: Using the optional accessories for cleaning generally requires less water than wallpaper removal. Using less water will decrease time it takes for the unit to make steam.


The Large Cleaning Brush (a)

The large cleaning brush and towel can be used to clean large, solid areas or upholstery. It can be used on surfaces such as ceramic, stone, parquet, marble, linoleum and carpet (see **Steam Cleaning Tips**, right, before cleaning).

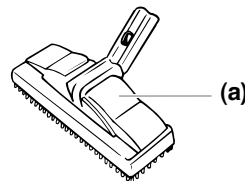


Window / Tile squeegee (b)

The squeegee is an excellent tool for cleaning windows and also tiles. The rubber blade can be used to scrape away dirt and other particles as steam is applied.

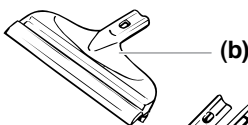


The Extensions (c)

The extensions can be used for floor cleaning and to help you reach into higher or harder to reach areas.

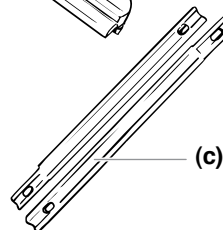

The Jet Nozzle with Brush (d)

The jet nozzle is recommended for steam cleaning smaller, harder to reach areas.

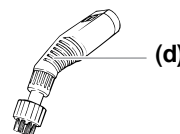

Steam Cleaning Tips - Read before starting

Flooring and Carpeting:

- This unit is not recommended for use on surfaces that can be damaged by heat or water, such as self-adhesive vinyl tiling, or wood flooring as the steam may cause the floor boards to swell. Always check with floor manufacturer before using steamer.
- Some carpets contain stain resistant treatments which may be affected by steam cleaning. Try cleaning a small, normally unseen area of carpet, and allow 24 hours to verify any unusual effects on the carpet. If this occurs, do not continue to use. Check with your carpet supplier for further information.

Windows and Tiles:

- Be careful not to pick up dirt or grit particles on the rubber blade as this could scratch the glass.
- Antique and stained glass may be brittle and may crack under extreme temperatures.
- Do not use on glass when the temperature is below 32°F (0°C). Glass may crack in cold temperatures.
- If your window has been treated or coated in any way, check with manufacturer before using steamer.

Upholstery and Fabrics:

- Some upholstery and fabrics contain stain resistant treatments which may be affected by steam cleaning. Try cleaning a small, normally unseen area and allow 24 hours to verify any unusual effects. If this occurs, do not continue to use. Check with material supplier for further information.
- Always check the suitability of materials before steam cleaning. Do not use on any surfaces that cannot withstand temperatures in excess of 212°F (100°C).
- On clothing, always check the garment label or check with the clothing retailer before steam cleaning.
- When cleaning upholstery or clothing, do not soak the material. Only a small amount of steam is sufficient for cleaning. Too much steam can leave water marks or other damage.

General:

- Activate the trigger as needed for sufficient steam supply. Use the soft bristles on the accessories to brush away dirt, grease, unwanted dried paint, etc. Do not over-scrub the surface unless you are cleaning tiles or stone.
- Use only clean tap water or distilled water when using the steamer. No detergents or any other additives are needed.
- Read this manual for complete instructions. Follow all warnings.

When you are finished steaming

Storage:

When you have completed your steaming job, follow the steps below to store the unit.

1. Shut the unit OFF (O).
2. Activate trigger until all pressure has been released.
3. Unplug power cord.
4. Allow steamer to cool for at least twenty (20) minutes.
5. Activate trigger to release pressure. Remove all accessories from handle.
6. Empty any remaining water in reservoir to prevent overfilling the next time the steamer is used. **NEVER store the unit with water in the container.**
7. Place the unit in a cool, dry location.

IMPORTANT: ALWAYS store the unit empty.

IMPORTANT: NEVER store the unit temperatures below 40° F (4° C).

Maintenance:

Over time, the reservoir may experience mineral build-up caused by the high mineral content found in most local water supplies. One way to avoid this is to use distilled water with this steamer. If you are unable to use distilled water, follow the steps below to remove mineral build-up. It is recommended that these steps be performed on a periodic basis.

1. Follow steps 1-6 in Storage, left.
2. Using a measuring cup, mix 8 ounces of vinegar and 8 ounces of water.
3. Slowly pour water/vinegar mixture into the reservoir.
4. Allow the unit to sit for at least thirty (30) minutes.
5. Empty the reservoir of the water/vinegar mixture.
6. Rinse reservoir with fresh water and drain. Repeat until vinegar odor dissipates.
7. Replace fill cap and store unit in a cool, dry place.

Wagner One Year Limited Warranty

KEEP ON FILE

This product manufactured by Wagner Spray Tech Corporation (Wagner), is warranted to the original retail purchaser against defects in material and workmanship for one year from date of purchase if operated in accordance with Wagner's printed recommendations and instructions. This product is designed for home use only. If this product is used for professional/rental purposes, this warranty applies only for 30 days from date of purchase.

This warranty does not cover damage resulting from improper use, accidents, user's negligence or normal wear. This warranty does not cover defects or damages caused by service or repair performed by anyone other than a Wagner Authorized Service Center. This warranty does not apply to accessories.

ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO ONE YEAR FOR HOME USE AND 30 DAYS FOR PROFESSIONAL/RENTAL USE FROM DATE OF PURCHASE.

WAGNER SHALL NOT IN ANY EVENT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, WHETHER FOR BREACH OF THIS WARRANTY OR ANY OTHER REASON.

If any product is defective in material and/or workmanship during the applicable warranty period, return it with proof of purchase, transportation prepaid to any Wagner Authorized Service Center. Contact Wagner Technical Service at 1770 Fernbrook Lane, Plymouth, MN 55447 or telephone 1-800-727-4023 for authorized service center locations. Wagner's Authorized Service Center will either repair or replace the product (at Wagner's option) and return it to you, postage prepaid.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitation and exclusion may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Garantie limitée d'une année de la société Wagner

GARDEZ DANS VOS DOSSIERS

Ce produit, fabriqué par la société Wagner Spray Tech (« Wagner »), est garanti au premier acheteur au détail contre toute défectuosité de matériau ou d'exécution, pour une période d'une année à compter de la date d'achat, pourvu que l'on se serve du produit en suivant les recommandations et consignes écrites de Wagner. Ce produit est destiné à l'usage domestique seulement. Si on l'utilise pour des fins professionnelles ou pour la location, la présente garantie ne s'applique que pendant une période de 30 jours à compter de la date d'achat.

La présente garantie ne s'applique pas aux dégâts entraînés par une utilisation incorrecte, par un accident, par la négligence de l'utilisateur ou par l'usure normale. La présente garantie ne s'applique non plus aux défectuosités ou dommages résultant de l'entretien ou de la réparation que fait une personne quelconque qui ne soit pas membre d'un centre d'entretien agréé de Wagner. La présente garantie ne s'applique pas aux accessoires.

TOUTE GARANTIE IMPLICITE DE QUALITÉ MARCHANDE OU D'ADAPTATION À UN USAGE PARTICULIER EST LIMITÉE À UNE PÉRIODE D'UNE ANNÉE POUR L'UTILISATION DOMESTIQUE ET DE 30 JOURS POUR UNE UTILISATION PROFESSIONNELLE OU DE LOCATION, À COMPTER DE LA DATE D'ACHAT.

WAGNER NE SERA EN AUCUN CAS RESPONSABLE DE DOMMAGES ACCESSOIRES OU INDIRECTS DE QUELQUE NATURE QUE CE SOIT, À LA SUITE D'UNE INOBSERVATION DE LA PRÉSENTE GARANTIE OU POUR UNE AUTRE RAISON QUELCONQUE.

Si un produit est défectueux en ce qui concerne les matériaux ou l'exécution pendant la période de garantie applicable, vous devez le retourner, avec une preuve d'achat et frais de port payés, à n'importe quel centre d'entretien agréé de Wagner. Pour connaître l'emplacement des centres d'entretien agréés de la société, communiquez avec le service technique de Wagner au 1770 Fernbrook Lane, Plymouth, MN 55447 USA, ou téléphonez au 1-800-727-4023. Le centre d'entretien agréé de Wagner réparera ou remplacera le produit (à la discrétion de Wagner) et vous le retournera par la poste, avec frais de port payés.

Certaines provinces interdisent les restrictions sur la durée d'une garantie implicite ou l'exclusion des dommages accessoires ou indirects. Il se peut donc que la restriction et l'exclusion énoncées ci-dessus ne s'appliquent pas à vous.

Le présente garantie vous accorde des droits juridiques spécifiques, et vous avez peut-être d'autres droits, qui peuvent varier d'une province à l'autre.

Garantía limitada de un año de Wagner

MANTENGALA ARCHIVADA

Este producto fabricado por Wagner Spray Tech Corporation (Wagner) es garantizado al comprador original al por menor contra defectos en el material y la mano de obra por un año a partir de la fecha de compra si se opera siguiendo las recomendaciones e instrucciones impresas de Wagner. Este producto ha sido diseñado solamente para uso doméstico. Si se usa para propósitos profesionales o de alquiler, esta garantía se aplica solamente por 30 días a partir de la fecha de compra.

Esta garantía no cubre daños que resulten del uso inadecuado, accidentes, negligencia del usuario o desgaste normal. Esta garantía no cubre defectos ni daños causados en mantenimiento o reparaciones realizados por alguien que no sea un Centro de Servicio Autorizado por Wagner. Esta garantía no se aplica a los accesorios.

TODA GARANTIA IMPLICITA DE COMERCIABILIDAD O APTITUD PARA UN PROPOSITO PARTICULAR ESTA LIMITADA A UN AÑO PARA USO DOMESTICO Y A TREINTA DIAS PARA USO PROFESIONAL O DE ALQUILER A PARTIR DE LA FECHA DE COMPRA.

WAGNER NO SERA RESPONSABLE BAJO NINGUNA CIRCUNSTANCIA POR NINGUN DAÑO INCIDENTAL O INDIRECTO DE NINGUNA CLASE, YA SEA POR VIOLACION DE ESTA GARANTIA O CUALQUIER OTRA RAZON.

Si cualquier producto resulta defectuoso en sus materiales y/o mano de obra durante el periodo de garantía aplicado, devuélvalo con el comprobante de compra, flete pagado anticipadamente, a cualquier Centro de Servicio Autorizado por Wagner. Póngase en contacto con el Departamento de Servicio Técnico de Wagner en 1770 Fernbrook Lane, Plymouth, MN 55447 o llame por teléfono al 1-800-727-4023 para averiguar las ubicaciones de los Centros de Servicio Autorizados. El Centro de Servicio Autorizado de Wagner reparará o cambiará el producto (a criterio de Wagner) y se lo devolverá a usted con el porte pagado anticipadamente.

Algunos estados no permiten limitaciones a la duración de una garantía implícita ni la exclusión de daños incidentales o indirectos, de modo que la limitación y exclusión anteriores puede que no se apliquen a usted.

Esta garantía le da a usted derechos legales específicos y usted podría tener también otros derechos que varían de un estado a otro.