



Read Manufacturer's Instructions.
Failure to do so may result in injury
and/or property damage.

Operating Instructions



Check and fill oil



Check and fill gas



Water must be turned on before starting
engine. Pump damage may occur if engine
is running without water on.



Point gun in a safe direction, pull trigger
to purge any air in system while setting
lock.



Set choke or idle speed depending
on model



Pull cord to start engine

**To Stop: Turn engine off per manual,
squeeze trigger to release any retained
water pressure.**

Set trigger lock when not in use.